



WIRELESS REMOTE CONTROL

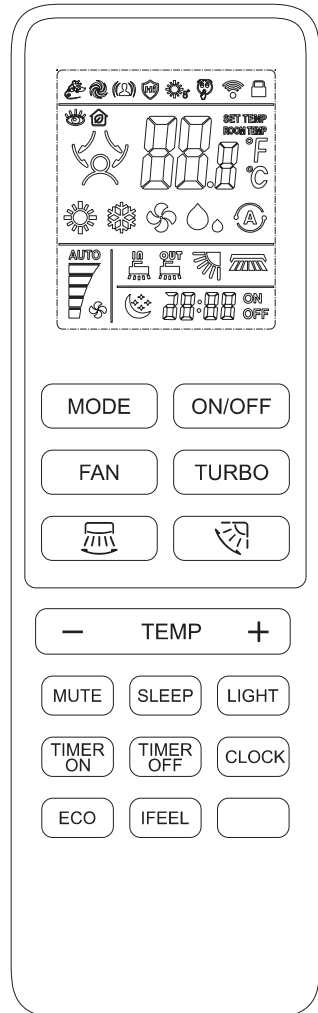
Thank you very much for purchasing this Air Conditioner. Please read the Wireless Remote Control instructions carefully before using this appliance and keep this manual for future reference.

*The design and specifications of the Wireless Remote Controller are subjected to change without prior notice.

REMOTE CONTROL




Remote Control Display


No.	Symbols	Meaning
1		Auto Mode
2		Cooling Mode
3		Dry Mode
4		Fan Only Mode
5		Heating Mode
6		8°C Heating Function
7		ECO Function
8		Timer/Clock Function
9		Temperature Indicator
10		Fan Speed: Auto/ High/ Mid-High/ Mid/ Mid-Low/ Low
11		MUTE Function
12		TURBO Function
13		Up-Down Auto Swing
14		Left-Right Auto Swing
15		SLEEP Function
16		I FEEL Function
17		Signal Indicator
18		Child-Lock
19		Clean Function





The display and some functions of the remote control may vary by model.

REMOTE CONTROL

No.	Button	Function
1	ON / OFF	Turns on/off the air conditioner.
2	Temp +	Increases temperature, or Timer/Clock setting hours.
3	Temp -	Decreases temperature, or Timer/Clock setting hours.
4	MODE	Selects the mode of operation (AUTO, COOL, DRY, FAN, HEAT).
5	ECO	Activates/deactivates the ECO function.
6	TURBO	Activates/deactivates the TURBO function.
7	FAN	Selects the fan speed.
8	TIMER ON	Sets the time for TIMER ON function.
9	TIMER OFF	Sets the time for TIMER OFF function.
10	SLEEP	Switches on/off the SLEEP function.
11	LIGHT	Switches on/off the indoor unit LED display.
12	◀ SWING 	Stops or Starts horizontal louver movement or sets the desired up/down air flow direction.
13	◆ SWING 	Stops or Starts vertical louver movement or sets the desired left/right air flow direction.
14	I FEEL	Switches on/off the I FEEL function.
15	MUTE	Switches on/off the MUTE function.
		Press for 5 seconds to activate/deactivate the CLEAN function
16	CLOCK	Sets the current time.
17	TIMER ON + TIMER OFF	Press for 3 seconds to activate/deactivate the CHILD-LOCK function.
18	◆ SWING  + TEMP +	Activates/deactivates the 8°C Heat function.
19	MODE + - TEMP	Press for 2 seconds to alternate between °C and °F scale.

 The display and some functions of the remote control may vary by model.

 The shape and position of buttons and indicators may vary by model, but their functions are the same.


 The indoor unit will beep to acknowledge the reception of a signal from the remote when a button is pressed.

REMOTE CONTROL

Replacement of Batteries

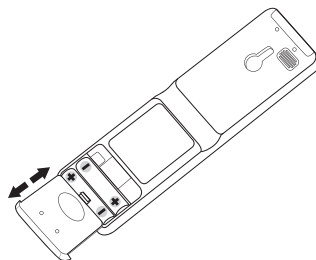
Remove the battery cover plate from the rear of the remote control, by sliding it in the direction of the arrow.

Install the batteries according to the direction (+ and -) shown on the Remote Control. Reinstall the battery cover by sliding it into place.

 Use 2 AAA (1.5V) batteries.


Do not use rechargeable batteries.

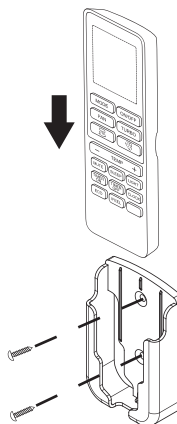
When the display is no longer legible, replace the 2 old batteries with new ones of the same type and at the same time. Dispose of batteries responsibly per regulatory requirements.



Storage and Tips for Using the Remote Control


The remote control may be mounted on a wall with a remote control holder (optional part).

-  1. Point the remote control toward the air conditioner and make your selections. The indoor unit will beep if the signal is received.
2. The remote control will operate the air conditioner at a distance up to 23ft (7m).
3. Check that there is no object between the remote control and the signal receptor in the indoor unit.
4. Never leave the remote control exposed to direct sunlight.
5. Keep the remote control at least 3.5 feet (1m) from the television or other electrical appliances.





REMOTE CONTROL

Press MODE button to select the mode of operation (AUTO, COOL, DRY, FAN, HEAT).

 If the unit does not respond when changing modes, wait 3 minutes and try again.


AUTO MODE


AUTO  Automatic mode.

To set to AUTO mode, press **MODE** until the symbol  appears on the display. In AUTO mode the run mode will be set automatically according to the room temperature.

Indoor Temperature	Mode	Target Temperature
≤ 70°F (21°C)	HEATING	72°F (22°C)
70°F-73°F (21°C-23°C)	FAN ONLY	
73°F-79°F (23°C-26°C)	DRY	Room temperature decrease 2°F after 3 minutes.
> 79°F (26°C)	COOLING	79°F (26°C)

COOLING MODE


COOL  The cooling function allows the air conditioner to cool the room and reduce air humidity at the same time.

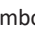 
To activate the cooling function (COOL), press the **MODE** button until the symbol  appears on the display.

Set the desired temperature using the + or - buttons. The cool mode will activate when room temperature is above the set temperature.


Note: Set temperature range is between 61°F and 86°F.

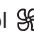 
DRY MODE

DRY  This function reduces the humidity of the air to make the room more comfortable.


To set to DRY mode, press **MODE** until the symbol  appears on the display. When activated, the unit will automatically reduce the humidity to a predetermined setting.


FAN MODE (Not FAN Button)

FAN  Fan mode, air ventilation only.

To set to FAN mode, press **MODE** until the symbol  appears on the display.


HEATING MODE

HEAT  The heating function allows the air conditioner to heat the room.


To activate the heating function (HEAT), press the **MODE** button until the symbol  appears on the display.

Set the desired temperature using the + or - buttons. The heat mode will activate when room temperature is below the set temperature.

Note: Set temperature range is between 61°F and 86°F.

 When the unit first starts in heat mode, it may take 2-5 minutes before air flow will be discharged from the unit. If needed, wait 3 minutes before restarting the unit.

FAN SPEED Function (FAN Button)

FAN  Change the operating fan speed.

Press the **FAN** button to set the running fan speed. It can be set to AUTO/ HIGH/ MID-HIGH / MID/ MID-LOW/ LOW speed.



REMOTE CONTROL

CLOCK Function

CLOCK Change the current local time.





Press the **CLOCK** button once. Set the current local time in 24 hour format using the + and - buttons. Press the **CLOCK** button a second time to confirm.


SWING Function




The horizontal louver is automatically adjusted according to the selected operating mode. The direction of airflow can be further adjusted by using the **SWING** buttons on the remote control.


Operation Mode	Automatic Airflow Direction
COOL, DRY	Horizontal
HEAT, FAN ONLY	Downward

1. Press the  button to activate the horizontal flap to swing up and down. The symbol  will appear on the remote display. Press again to stop the swing movement at the current angle.
2. Press  to active the vertical deflectors to swing left and right. The symbol  will appear on the remote display. Press again to stop the swing movement at the current angle.

 Never adjust or set the flap or deflectors manually as this could damage the mechanism.

Note: If unit does not have 4-way airflow function, the horizontal airflow may be adjusted manually.

 Never insert fingers, sticks or other objects into the air inlet or outlet vents as this action could cause serious injury or damage to the unit.

 Avoid setting the horizontal louver downward for an extended period of time in Cooling or Dry modes to prevent condensed water from dripping out of the front of the unit.

TIMER Function ---- TIMER ON

TIMER ON Switch the unit ON after a set time.

With the unit switched off, set the TIMER. To set the timer to switch the unit on automatically:


1. Press the **TIMER ON** button once. The "12:00 ON" will appear and flash on the remote display.
2. Press the + or - buttons to set the desired Timer-on time in 24hr format.
3. Press the **TIMER ON** button a second time to confirm. A beep will sound, "ON" will stop flashing and the timer indicator on the indoor unit will light up.
4. After setting the timer press the **MODE** button to set the needed mode (Auto, Cool, Dry, Fan or Heat). Set the needed fan speed by pressing the **FAN** button. Press + or - to set the needed operation temperature. CANCEL the timer function by pressing the **TIMER ON** button again.

TIMER Function ---- TIMER OFF

TIMER OFF Switch the unit OFF after a set time.

To set the timer to switch the unit off automatically:

1. Confirm the appliance is ON.
2. Press the **TIMER OFF** button once to set the unit to switch off. The "12:00 OFF" will appear and flash on the remote display. Press the + or - to set the timer in 24hr format.
3. Press the **TIMER OFF** button a second time to confirm. A beep will sound, "OFF" will stop flashing and the timer indicator on the indoor unit will light up. Cancel the timer function by pressing the **TIMER OFF** button again.

-  Press the + or - button once, the time increases/decreases by 1 minute.
- Press and hold the + or - button for 2 seconds, the time increases/decreases by 10 minutes.
 - Long press the + or - button, the time increases/decreases by 1 hour.

Note: If the Timer ON/OFF button has been pressed and there is no further activity for 10 seconds, the unit will return to normal operation and the timer function will be canceled.

REMOTE CONTROL

TURBO Function



To activate the turbo function, press the **TURBO** button. The swirl symbol will appear on the display. Press again to cancel this function.

When in Fan Only or Dry mode, the fan speed will be set to high automatically.

When in Cooling mode, the fan speed will be set to high and the temperature to 61°F.

When in Heating mode, the temperature is set to 86°F and the fan speed to AUTO.

SLEEP Function



Sleep function gives you a more comfortable environment for sleep. It can be set in Cooling, Heating or Dry modes.

The appliance will stop operation automatically after operating for 8 hours. Fan speed is automatically set at low speed.

There are 4 levels of sleep function. Each time the **SLEEP** button is pressed, the sleep function will be changed in the following sequence:



Sleep Mode	Operating Mode	Target Temp Increase/Decrease After 1, 2, 6 or 7 Hours			
		1 hour	2 hours	6 hours	7 hours
Mode 1 ☾	Cool/Dry	-	+2°F	-	-
	Heat	-	-2°F	-	-
Mode 2 🌙	Cool/Dry	-	+2°F	-1°F	-1°F
	Heat	-	-2°F	+1°F	+1°F
Mode 3 🌘	Cool/Dry	+1°F	+2°F	-2°F	-1°F
	Heat	-2°F	-2°F	+2°F	+2°F
Mode 4 🌑	Cool/Dry	No Change - Turns off after 8 hours			
	Heat	No Change - Turns off after 8 hours			

ECO Function



Automatically sets the operation at minimum capacity to save energy.

Press the **ECO** button. The symbol leaf will appear on the display, and the appliance will run in ECO mode. Pressing the ON/OFF, MODE, TEMP, FAN, SLEEP, MUTE or ECO buttons will cancel ECO function.

Note: The ECO function is not available in AUTO Mode.

I FEEL Function



Press the **I FEEL** button to activate the function. The symbol person will appear on the remote display. Press again to deactivate this function.

This function enables the remote control to sense the temperature at its current location, and send this signal to the air conditioner to optimize the temperature around you and ensure your comfort. The remote must be near the indoor unit to receive the signal. When turning off the unit or when the I FEEL function is not needed, turn off the function to save energy. If the I FEEL function will not turn off, press and hold button for 5 seconds.

MUTE Function



1. Press the **MUTE** button to activate this function. The symbol speaker with slash will appear on the remote display. Press button again to deactivate this function.
2. When MUTE is selected, the remote controller will display the auto fan speed, and the indoor unit will operate at the lowest fan speed to minimize sound.
3. Press the FAN or MODE button to cancel the MUTE function. The MUTE function cannot be activated under Dry Mode.

