


STANDARD 3/4" GARDEN HOSE THREAD WITH 1/2" FEMALE PIPE THREAD

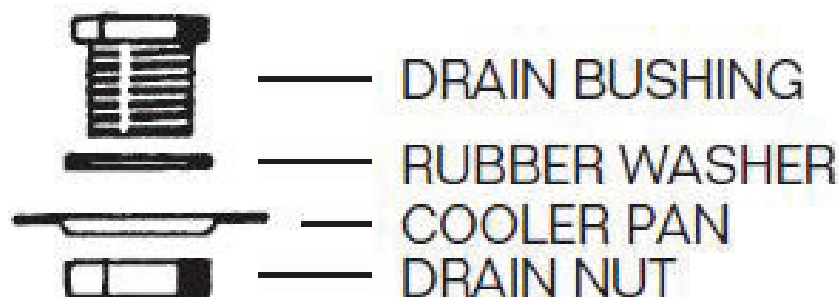

1. Insert drain bushing through hole in cooler pan as shown. Use rubber washer to seal drain.
2. Attach nut securely without applying excessive pressure with wrench.
3. Fill cooler pan with water to a height of about 1/2" below the height of the overflow pipe. Set proper water level by adjusting (moving or bending) float valve arm.

Remove overflow pipe to clean cooler.

⚠ WARNING: Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.

Made in China
www.dialmfg.com

© Copyright 2019
Dial Mfg., Inc. Phoenix, AZ

PN 9229 Form 993511-0519

