


WATER SHUT OFF CONTROL VALVE FOR 1/4" COPPER OR POLY TUBE WATER LINE

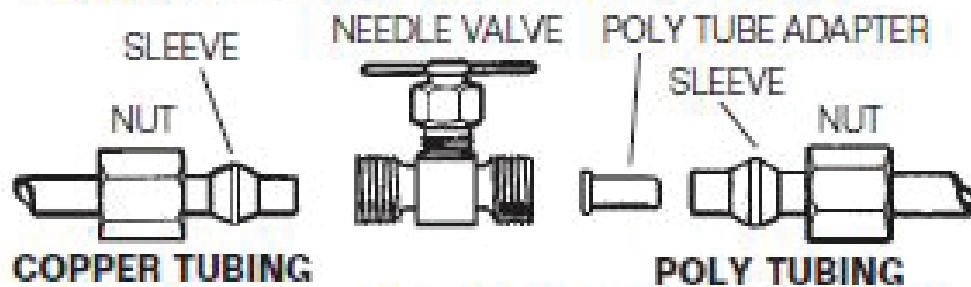

CAUTION: Turn off electricity at circuit breaker before working on evaporative cooler.

NOT FOR USE WITH POTABLE WATER LINES

Copper Tubing: 1. Cut the end of the tube square to insure proper fit. 2. Place nut and sleeve onto copper tube. 3. Tighten nut with a wrench.

Poly Tubing: 1. Cut the end of the tube square to insure proper fit. 2. Place nut and sleeve onto poly tube. 3. Insert poly tube adapter into end of tube. 4. Tighten nut with a wrench.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

PN 9406 Form 993507-0519



0 26529 94060 3

www.dialmfg.com Made in China
© Copyright 2019 Dial Mfg., Inc. Phoenix, AZ