


# WATER SHUT OFF CONTROL VALVE FOR CONNECTING 1/4" COPPER OR POLY WATER LINE TO SILL COCK OR PIPE ADAPTER

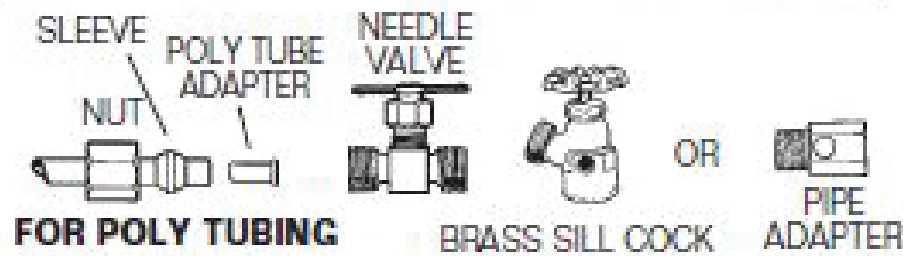

**CAUTION: TURN OFF ELECTRICITY AT CIRCUIT BREAKER  
BEFORE WORKING ON EVAPORATIVE COOLER.**

## ***NOT FOR USE WITH POTABLE WATER LINES***

1. Attach needle valve to sill cock, pipe adapter or other 1/8 FPT fitting.
2. Attach tubing: **Copper Tubing:** 1. Cut the end of the tube square to insure proper fit. 2. Place nut and sleeve onto copper tube. 3. Tighten nut with a wrench. **Poly Tubing:** 1. Cut the end of the tube square to insure proper fit. 2. Place nut and sleeve onto poly tube. 3. Insert poly tube adapter into end of tube. 4. Tighten nut with a wrench.

**⚠ WARNING: Cancer and Reproductive Harm -**  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

PN 9421 Form 993509-0519



[www.dialmfg.com](http://www.dialmfg.com) Made in China  
© Copyright 2019 Dial Mfg., Inc. Phoenix, AZ