


WATER SHUT OFF CONTROL VALVE FOR CONNECTING 1/4" COPPER TO COPPER, COPPER TO POLY OR POLY TO POLY

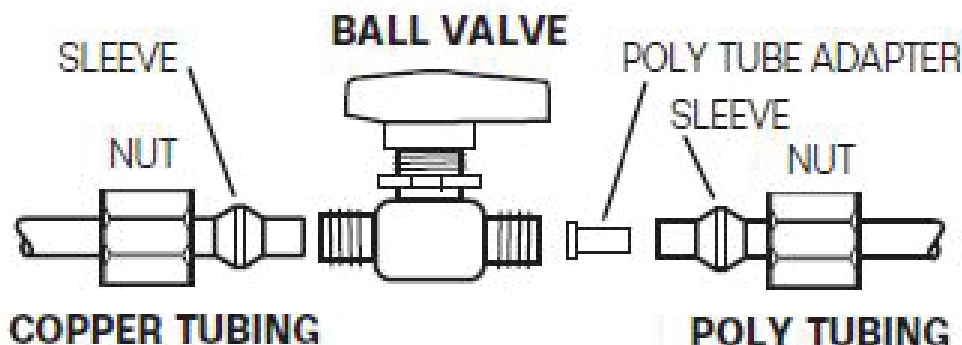

CAUTION: Turn off electricity at circuit breaker before working on evaporative cooler.

Copper Tubing:

1. Cut the end of the tube square to ensure proper fit.
2. Place nut and sleeve onto copper tube.
3. Tighten nut with a wrench.

NOT FOR
USE WITH
POTABLE
WATER
LINES

Poly Tubing:

1. Cut the end of the tube square to ensure proper fit.
2. Place nut and sleeve onto poly tube.
3. Insert poly tube adapter into end of tube.
4. Tighten nut with a wrench.

⚠ WARNING: Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.

PN 9448 Form 993527-0519



www.dialmfg.com Made in China

© Copyright 2019 Dial Mfg., Inc. Phoenix, AZ