


# CONNECTS 1/4" POLY TUBING TO COMPRESSION FITTINGS AND VALVES

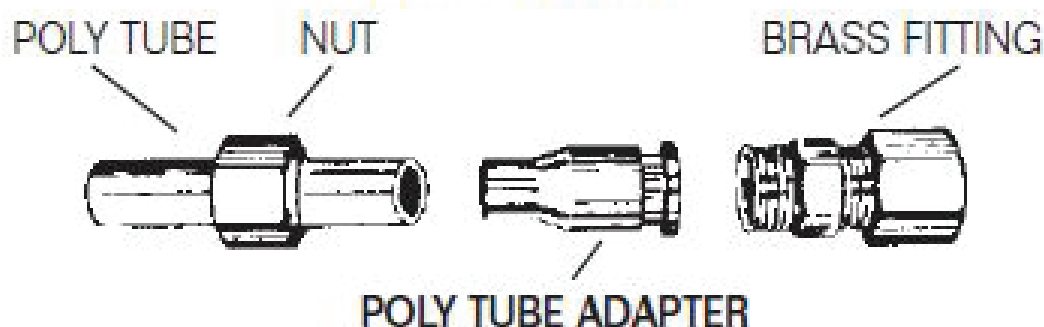

**CAUTION:** Turn off electricity at circuit breaker before working on evaporative cooler.

**Poly Tubing:** 1. Cut the end of the tube square to insure proper fit. 2. Place nut onto poly tube. 3. Place insert adapter into end of tube. 4. Tighten nut with a wrench.

***NOT FOR USE WITH POTABLE WATER LINES***

**⚠ WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

PN 9495 Form 99034-0519



[www.dialmfg.com](http://www.dialmfg.com) Made in China

© Copyright 2019 Dial Mfg., Inc. Phoenix, AZ