


# CONNECTS 1/4" POLY TUBING TO COMPRESSION FITTINGS AND VALVES

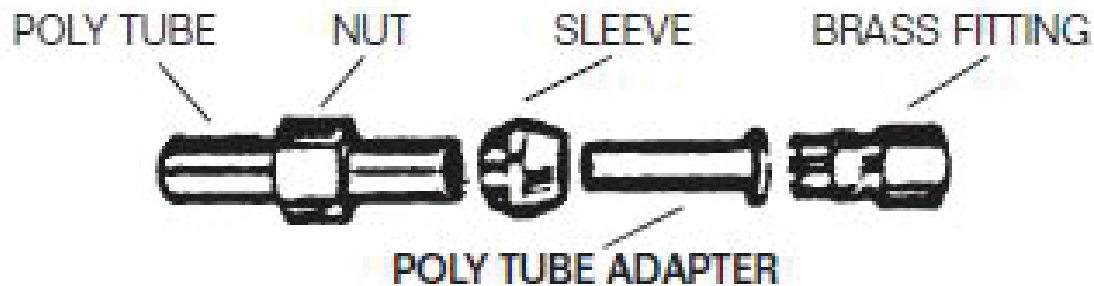

**CAUTION:** Turn off electricity at circuit breaker  
before working on evaporative cooler.

***NOT FOR USE WITH  
POTABLE WATER LINES***

**Poly Tubing:** 1. Cut the end of  
the tube square to insure proper fit.  
2. Place nut onto poly tube. 3. Place  
sleeve onto poly tube. 4. Place poly  
tube adapter into end of tube.  
5. Tighten nut with a wrench.

**⚠ WARNING:** Cancer and Reproductive  
Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

PN 9498 Form 993517-0519



[www.dialmfg.com](http://www.dialmfg.com) Made in China

© Copyright 2019 Dial Mfg., Inc. Phoenix, AZ