
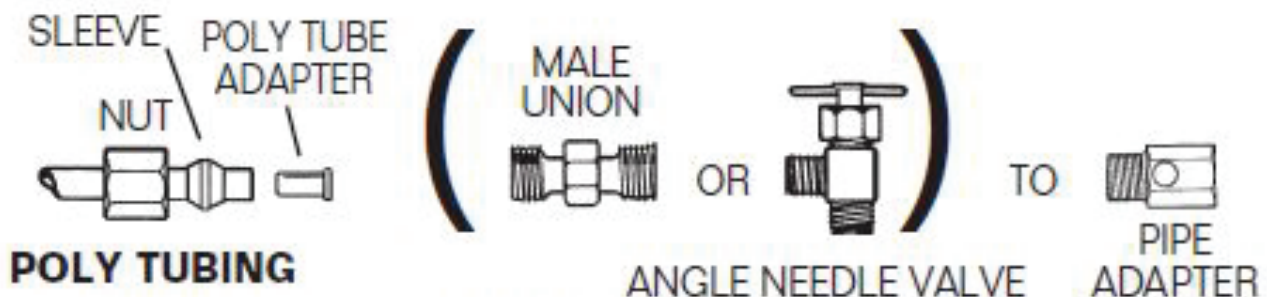


3/4"x1/8"x3/4" EASY ADAPTER

Use with 1/8 MPT union or angle needle valve
to supply water to cooler.

FOR CONNECTING 1/4" COPPER OR POLY WATER LINE TO EASY ADAPTER

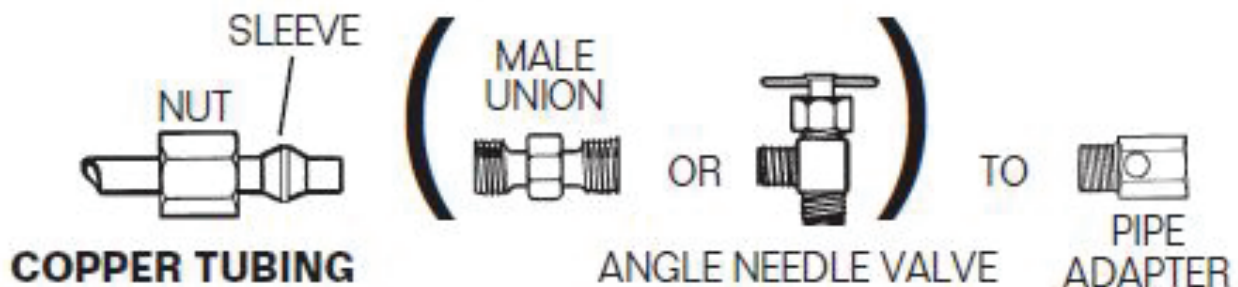

**CAUTION: Turn off electricity at circuit breaker
before working on evaporative cooler.**

NOT FOR USE WITH POTABLE WATER LINES

1. Install easy (pipe) adapter to water line using Teflon tape pipe thread sealant.
2. Attach 1/8 MPT x 1/4 cc male union or 1/8 MPT x 1/4 cc angle needle valve to easy adapter.
3. Attach tubing.

⚠ WARNING: Cancer and
Reproductive Harm -
www.P65Warnings.ca.gov.

www.dialmfg.com

© Copyright 2019
Dial Mfg., Inc. Phoenix, AZ

PN 9026 Form 99312-0519



Made in China